 


DELLA®

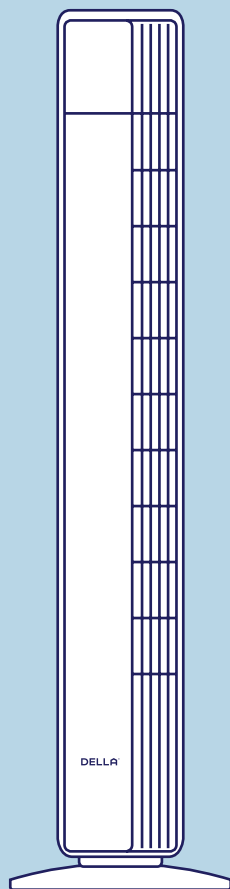

Tower Fan

Instruction Manual
Installation and Operation Guide





Table of Content

04

Warning and Safety

06

Name of Parts
Product Specification

07

Assembly Instruction

08

Power Connection

10

Control Panel
Remote Control

13

Operation Instruction

16

Care and Maintenance

19

Troubleshooting

20

Warranty

Warning and Safety

- Read this guide before installation. Failure to follow the safety instructions may result in property damage, serious injury, or death.
- Please Keep this manual.



Danger:

Indicates an **IMMINENTLY** hazardous situation that, if not avoided, will result in death, serious injury, or serious property damage.



Warning:

Indicates an **POTENTIALLY** hazardous situation that, if not avoided, will result in death, serious injury, or serious property damage.



Caution:

Indicates an **POTENTIALLY** hazardous situation that, if not avoided, will result in minor to moderate injury. It may also be used to indicate unsafe practice.



Attention:

Pay additional attention to the instruction.



DO NOT:

Indicates prohibited actions and/or practice.

About Installation



- Do not install or use this appliance in the bathroom, laundry area, or places that might come into contact with water.
- Do not alter, change, or modify the appliance.



- The base must be properly assembled before using the tower fan.

About Power and Electricity



- Do not operate the tower fan with a damaged cord or plug.
- Do not bend, tug, or compress the power cord to prevent damaging the cord. Damaged cord should be replaced by a qualified electrician.



- Do not run the power cord under any carpeting nor covering it with throw rug or pillows.
- Do not use the tower fan with any solid-state speed control device.








- Ensure that the power voltage corresponds to that stamped on the rating plate.
- Always disconnect the tower fan from power supply when leaving it unused for a long time or before cleaning.






- Arrange the power cord away from high traffic area to prevent tripping over.


Warning and Safety

About Operation	
<div> WARNING</div> <div></div>	<ul style="list-style-type: none">Do not disconnect the tower fan from power supply before shutting off the fan. This might create a spark and potentially cause a fire.Do not climb onto or place object on the tower fan.Do not insert your fingers or any objects into the power fan.Do not obstruct the air inlet and outlet.Do not operate the tower fan with wet hands.Do not operate the tower fan near flammables and combustibles.
<div> CAUTION</div> <div></div>	<ul style="list-style-type: none">Only operate / use the tower fan as instructed in this booklet. These instruction are not intended to cover every possible condition and situation. As with any household appliance, common sense and caution are therefore always recommended for usage and maintenance.

Encountering Troubles	
<div> WARNING</div>	<ul style="list-style-type: none">In the case of the tower fan emitting smoke, burning smell, or making unusual noise, shut down the fan and disconnect it from the power supply immediately. Contact a qualified technician for inspection and repair.

About Handling and Maintenance	
<div> WARNING</div> <div></div>	<ul style="list-style-type: none">Do not flush the tower fan with water.Do not use replacement parts that have not been recommended by the manufacturer, including homemade, 3D printed or other aftermarket parts.
<div> WARNING</div>	<ul style="list-style-type: none">Repairs should be carried out by a professional or qualified technician only. Incorrect repair could expose the user to potential electric shock or other kinds of hazard.Before cleaning the fan, it must be shut down and disconnect from power supply for at least 5 minutes.

 Name of Parts

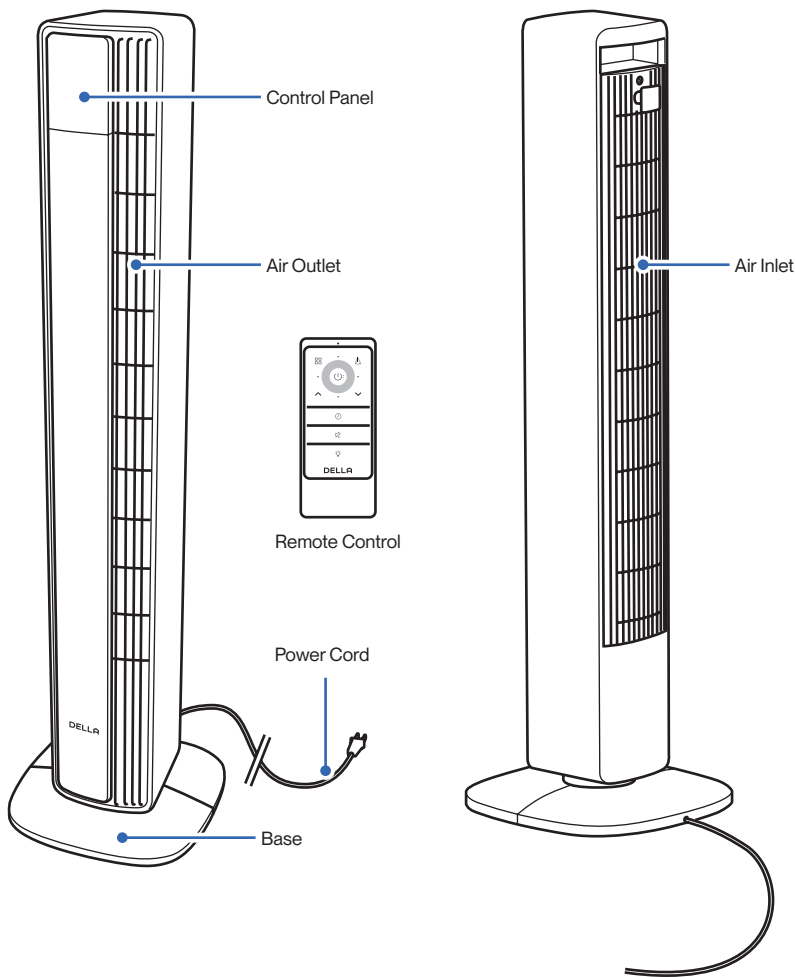


Product Specification

	TF01 / TF01S
Power Supply Input	120 V / 60 Hz
Rated Power	45 W

Assembly Instruction


Assemble the Base

 1

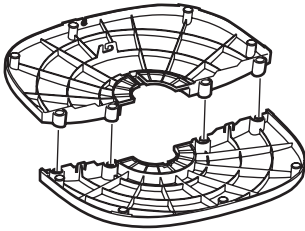


- Align and assemble the base plates.

 2

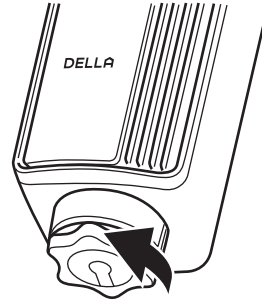


- Unscrew the retainer cap from the bottom of the fan.

 3

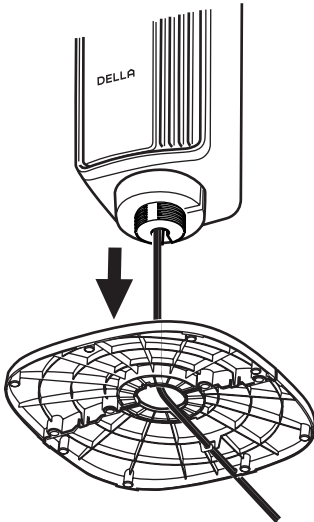

- Arrange the power cord through the center opening and clip underneath the base.

 4

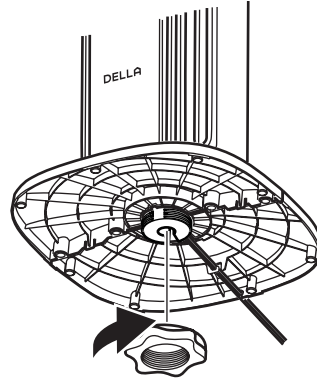

- Screw the retainer cap back to the tower fan.

 


- Do not pinch the power cord between the base and the retainer cap.

Assembly Instruction

Power Connection


1. Insert the power plug into a wall power socket.

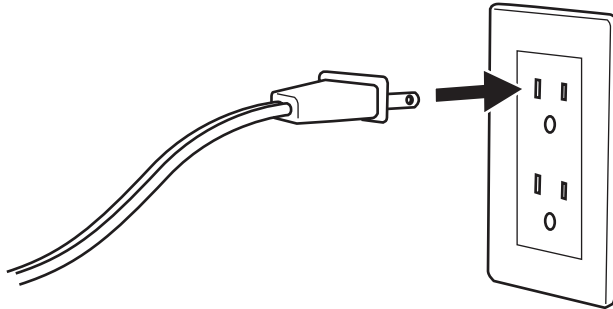

About Fused Safety Plug


This tower fan is equipped with a fused safety plug to protect against overload. In the case of an overload, the fuse wire would melt and disconnect power to the tower fan. A triggered fuse must be replaced before using the tower fan again.

 1. Unplug the power plug from power supply.
2. Slide open the fuse over.
3. Remove the old fuse.
4. Insert a new 2.5 amp 125 volt fuse.
5. Close the cover and reconnect the power plug to power supply.

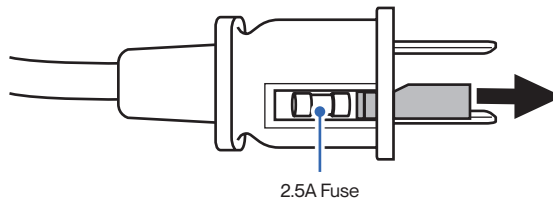

Before Using

 Operation Tips


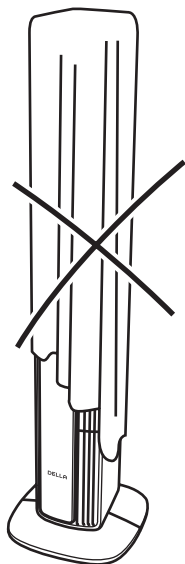


DO NOT obstruct the air inlet and outlet while the tower fan is in operation.



DO NOT use the tower fan near flammables and combustibles.

  Control Panel / Remote Control

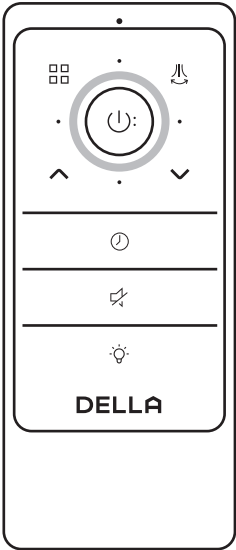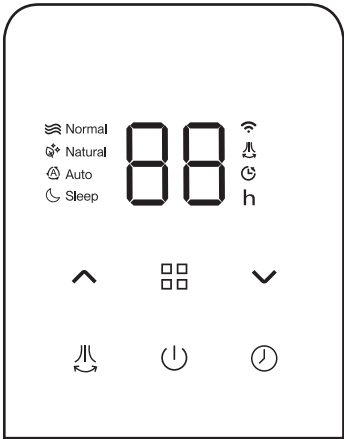

Increase Button
Increase fan speed (12 levels)



Mode Button
Select between normal, natural, auto, and sleep mode



Decrease Button
Decrease fan speed (12 levels)



Oscillate Button
Control the fan to oscillate



Power Button
Power ON / OFF the tower fan



Timer Button
Enable ON / OFF timer setting



Mute Button
Mute / Unmute the fan
*Only available on remote control



Display Button
Turn ON / OFF the fan display
*Only available on remote control

Remote Control

Remote Control (Using for the first time)

 
 
1. The remote control comes with a pre-installed battery.
2. Before using the remote control for the first time, pull and remove the insulating strip from the remote control

Remote Control (Replace Battery)

1. Hold the remote control with buttons facing downwards.
2. Remove the battery tray from the remote control by pulling the tray while pushing in the locking tab.
3. Place a CR2025 coin battery into the battery compartment according to the correct polarity.
4. Reinstall the battery tray into the remote control.




- Positive pole of the battery should be facing upward on the battery tray.

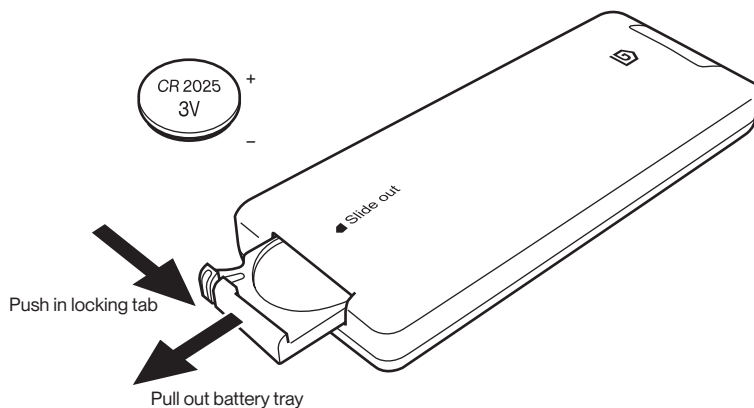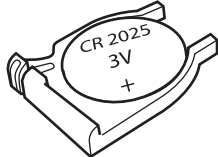

Remote Control

Coil Cell Battery Safety Warning



⚠ WARNING	
<ul style="list-style-type: none">• INGESTION HAZARD: This product contains a button cell or coin battery.• DEATH or serious injury can occur if ingested.• A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.• KEEP new and used batteries OUT OF REACH of CHILDREN• Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.	

- a) Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- b) Even used batteries may cause severe injury or death.
- c) Call a local poison control center for treatment information.
- d) Compatible battery type: CR2025, Voltage: 3V.
- e) Non-rechargeable batteries are not to be recharged.
- f) Do not force discharge, recharge, disassemble, heat above manufacturer's specified temperature rating or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- g) Ensure the batteries are installed correctly according to polarity (+ and -).
- h) Do not mix old and new batteries, different brands, or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- i) Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- j) Always completely secure the battery compartment. If the battery compartment does not close securely stop using the product, remove the batteries, and keep them away from children.
- k) Do not ingest battery, Chemical Burn Hazard.
- l) This product contains a coin or button cell battery. If the coin or button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- m) Keep new and used batteries away from children. If the battery does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Operation Instruction

Basic Operation

Press  to turn on the tower fan.

Press  and  to adjust fan speed. There are 12 levels of fan speed.

Press  to oscillate the tower fan and change airflow direction.

Operation Mode

Press  to select operation mode.



Normal Mode

Tower fan operates at a fixed fan speed.



Natural Mode

Tower fan operate in alternating fan speed, mimicking natural wind.



Auto Mode

Tower fan automatically adjust fan speed according to its detected ambient temperature.



Sleep Mode

Tower fan automatically decrease fan speed every 30 mins. The tower fan will also automatically turn on mute function.


Timer Function (Shutdown Timer)

Set a timer to automatically turn OFF the tower fan.

Press  when the tower fan is ON.

Continue pressing  to set the desired turn off time between 0 - 24 hours.



Leave the setting for 10 seconds to confirm the setting.

Press  again to cancel the timer setting.

Display ON / OFF

The tower fan display will automatically turn off after not touching for 30 seconds.

In sleep mode, the display will automatically turn off after not touching for 5 seconds.



Press  on the remote control once to force the display to be ON, press  again to force the display to be off.

Operation Instruction

Mute Function



Press  on the remote control once to mute the buzzer.

Press  on the remote control again to unmute the buzzer.



Alternatively, press and hold   on the control panel for 3 seconds to mute / unmute the buzzer.

Child Lock

Child lock function will disable all input from the control panel until unlocked.


Press and hold  and  for 3 seconds to activate child lock.

"LC" will be displayed on the display.

Press and hold  and  for 3 seconds again to deactivate child lock.

Wi-Fi Reset

Wi-Fi reset function allows you to clear all existing app pairing and pair the tower fan to your mobile device's app again.

Press and hold  for 5 seconds to enable Wi-Fi reset.

NOTE: Wi-Fi function is only available for TF01S model.

Factory Reset

When the tower fan is ON

Press and hold  for 3 seconds to reset the tower fan to factory default setting.

Operation Instruction

Wi-Fi Set Up (Only available for TF01S)

Other than the control panel and remote control, you can control your tower fan via Della+ app.

1. Search "Della+" on Apple app store or Google Play, or scan the QR code below to download the application.
2. Register an account in the app.
3. Follow the in-app instructions to add and pair your Della tower fan to the app and complete the Wi-Fi set up.



Device QR code

Scan this QR code to add device to your Della+ app.



- The Della+ application is free, however, data charges may apply when downloading or using the application.
- Della+ can be altered without notice for quality improvement and also be deleted depending on the circumstances of manufacturing firms.
- All trademarks, logo, brand names are the property of their respective companies. Use of these names, brands, and trademarks does not imply endorsement. Della assumes no responsibility with regard to the performance or use of these products.



 
- Check out detailed tutorial on the most updated application on dellahome.com/support

Care and Maintenance



- Before cleaning the tower fan, you must shut down the unit and disconnect it from the power supply for at least 5 minutes.
- Never flush the tower fan with water.


Cleaning the Unit

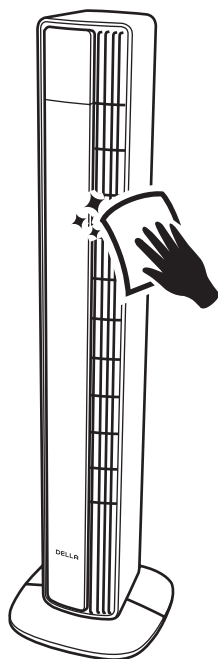


- Clean the tower fan with a soft dry cloth or a dampened cloth with neutral detergent.
- Remove dust and debris on the air inlet and outlet.

Care and Maintenance

 
Cleaning the Fan Blade

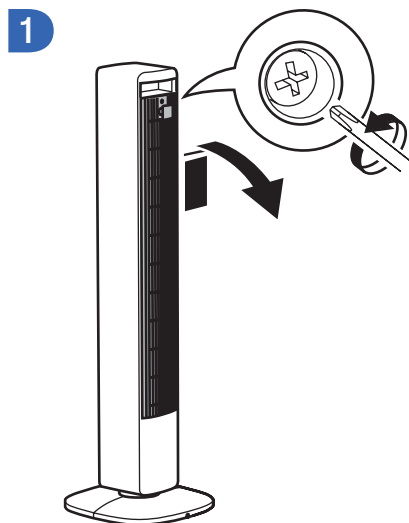

 
- Remove the screw holding the vent, then pull up and out the air inlet vent from the tower fan.

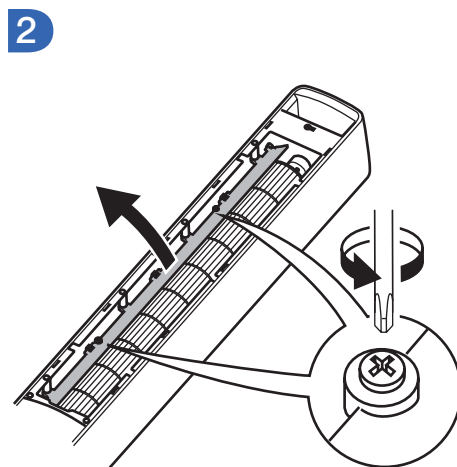

 - Remove the air deflector from the inside of the tower fan.

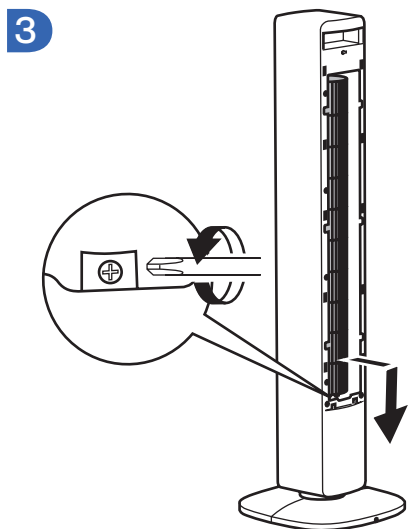

 - Remove the fan blade from the tower fan.

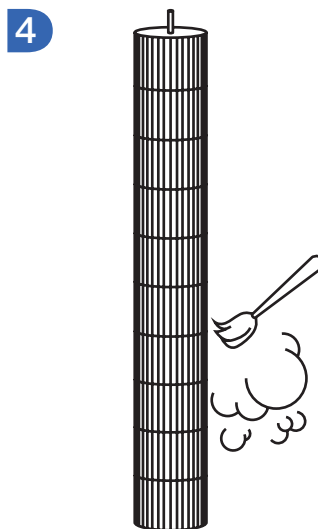

- Brush off dust or debris from the fan blade.

Care and Maintenance

Maintenance Routine

- Regularly check and remove any obstacles from the air inlet and outlet.

Planning to Not Operate the Tower Fan for a Long Period

- Disconnect the power supply of the tower fan.
- Clean the fan tower.
- Store the tower fan in a dry indoor location.

Using the Tower Fan after a Long Idle Period

- Clean the fan tower.
- Remove any obstacles from the air inlet and outlet.
- Connect the tower fan to power supply and start using.

Troubleshooting

Before consulting repair or warranty, please check the following troubleshooting guide.
In the case of an persistent problem, contact a qualified technician for diagnosis and repair.



- When encountering presisting problem, stop operation and disconnect the tower fan from power supply.
- Do not attempt to repair or modify the fan by yourslef. Incorrect work may result in electric shock, or injury.

Problem	Possible Cause / Explanation / Solution
The tower fan is non operational	The power cord is not plugged to an electric outlet.
	Fauly electric connection, mismatch outlet voltage, or damaged electronic control board.
	The fan is placed on uneven ground and internal protection system activated. Place the fan on flat and even ground.
Tower fan is shaky and making escessive noise	The fan blade is too dirty. Clean the fan blade.
	The base is not assembled securely.
The tower fan is not responding to control panel commands	The control panel with child lock enabled.
The tower fan is not responding to remote control commands	Remote control is too far away from the tower fan.
	There is an obstruction between the remote control and tower fan.
	The battery power has run out in the remote control. Replace the battery

Warranty



Scan the QR code or visit our page on dellahome.com/pages/warranty to sign up for warranty coverage on your new DELLA appliance.



dellahome.com/pages/warranty

WARRANTY COVERAGE

DELLA distributor (hereinafter "Company") warrants this product against failure due to defect in materials or workmanship under normal use and maintenance as follows: All warranty periods begin on the date of purchase. If a part fails due to defect during the applicable warranty period, Company will provide a new or remanufactured part, at Company's option, to replace the failed defective part at no charge for the part. This limited warranty is subject to all provisions, conditions, limitations and exclusions listed below.

STANDARD WARRANTY

- The standard warranty period is one (1) year for the entire unit and all parts, with no registration required.

EXTENDED WARRANTY

- The extended warranty period for Window ACs, Portable ACs, and Tower Fans is an additional 6-months period.
- In order to qualify for the free extended warranty the unit must be:
 1. Registered within one hundred (100) days of purchase.
 2. Must be with the original owner.
 3. In the same address of residence that you entered with your registration.

WARRANTY PARTS REPLACEMENT

- Some parts may need to be returned to Della. The limited lifetime warranty covers only parts that need to be replaced. For more information, please contact Della.

Warranty

LIMITED WARRANTY STATEMENT

LIMITATIONS OF WARRANTIES: ALL IMPLIED WARRANTIES AND/OR CONDITIONS (INCLUDING IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR USE OR PURPOSE ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. SOME STATES DO NOT ALLOW LIMITATION ON HOW LONG AN IMPLIED WARRANTY OR CONDITION LASTS, SO THE ABOVE MAY NOT APPLY TO YOU THE EXPRESS WARRANTIES MADE IN THIS WARRANTY ARE EXCLUSIVE AND MAY NOT BE ALTERED ENLARGED, OR CHANGED BY ANY DISTRIBUTOR, DEALER, OR OTHER PERSON, WHATSOEVER.

THIS LIMITED WARRANTY DOES NOT COVER:

1. Labor or other costs incurred for diagnosing, repairing, removing, installing, shipping, servicing or handling of either defective parts, or replacement parts, or new units.
2. Product cleaning required prior to warranty service and repair.
3. Normal maintenance as outlined in the installation and servicing instructions or Owner's Manual, including filter cleaning and/or replacement and lubrication.
4. Failure due to faulty installation or repairs, damage, misapplication, abuse, improper servicing, lack of or insufficient maintenance, unauthorized alteration or improper operation.
5. Failure to start due to voltage conditions, improper wiring, blown fuses, open circuit breakers, or damages due to the inadequacy or interruption of electrical service.
6. Failure or damage due to floods, winds, fires, lightning, accidents, corrosive environments (rust or residue etc.) or other conditions beyond the control of the Company.
7. Damages due to chemicals (volatile organic compounds, sulfur, acids, etc.) or particulates.
8. Failure or damage of coils, piping or other parts due to corrosion, when installed in corrosive environments or within one (1) mile of seacoast.
9. Parts not supplied or designated by Company, or damages resulting from their use.
10. Products installed outside the 48 contiguous United States, except the District of Columbia and Hawaii, and Canada.
11. Electricity or fuel costs or increases in electricity or fuel costs from any reason whatsoever, including additional or unusual use of supplemental electric heat.
12. Any cost to replace, refill or dispose of refrigerant, including the cost of refrigerant.
13. Shipping damage or damage as a result of transporting the unit.
14. Accessories such as condensate pumps, line sets and so forth are not covered.
15. Any special, indirect or consequential property or commercial damage of any nature whatsoever. Some states do not allow the exclusion of incidental or consequential damages, so the above limitation may not apply to you.
16. Consumable components, such as air filters, are not covered under parts warranty.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. In jurisdictions where warranty benefits conditioned on registration are prohibited by law, registration is not required, and the STANDARD warranty period shown above will apply.

Compliance Information

Radio Frequency Interference



Model: TF01 / TF01S

FCC Caution

 
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.



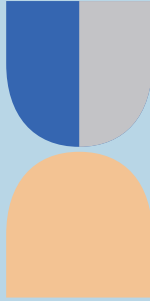

 www.dellahome.com

 support@dellahome.com

 800-863-4143

 6:00 a.m. – 4:00 p.m. PST Monday – Friday

© Della All rights reserved.

The design and specifications are subject to change without prior notice for product improvement. Any updates to the manual will be uploaded to the della website.
